

# User Manual

## WiFi Thermostat 561



Zoning

561\_U

10/17

Replaces: 10/16

## Introduction

The WiFi Thermostat 561 provides precise temperature control of a one-stage heating system. When connected to the Internet, the mobile app and website allows you to control the thermostat remotely. The thermostat and mobile app include an away feature that overrides the schedule to lower the temperature and increase energy savings. The thermostat is designed to support radiant floor heating and optional floor sensors can be installed to enhance comfort and protect floor coverings.



**tekmar**<sup>®</sup>

**A WATTS Brand**

# User Interface

## Home Screen

After 60 seconds of inactivity, the thermostat home screen displays only the time and the temperature.

The diagram illustrates the thermostat's user interface. The central home screen displays the 'tekmar' logo, current time (10:30 AM), outdoor temperature (60°), floor temperature (70°), and equipment status (Heat On). It includes a 'Go to schedule' icon, weather icons, and a 'Mode Heat' button. Callouts describe various functions: 'Go to schedule', 'Current time', 'Swipe to view' (Weather, Outdoor temperature, Floor temperature, Heat To setting), 'Current temperature', 'Equipment operation (Heat On)', 'Change operating mode', and 'Go to settings'. A 'Temperature Adjustment' screen shows a 'Heat To' setpoint of 70 and a 'Hold Until 5:00 PM' button. A 'MENU SELECTION' screen lists options: AWAY, SCHEDULE, DISPLAY, TIME, WIFI, SETUP, and a back arrow. A 'Mode' screen shows 'Heat' and 'Off' options. A 'Save' button is also shown.

Go to schedule

Current time

Swipe to view:

- Weather
- Outdoor temperature
- Floor temperature
- Heat To setting

Current temperature

Equipment operation (Heat On)

Change operating mode

Go to settings

Touch ▲ or ▼ to adjust temperature

Hold overrides the programmed schedule until the time shown

'Save to schedule' applies the new temperature to the current schedule event.

# User Settings

## Away


Use the Away setting to save energy when the building is unoccupied

Operates normally

Operates using the Away temperature selected in the Setup menu

Save

- Selecting the Away setting on a thermostat or the mobile app will affect all devices linked to that location through the app.
- The Away temperature can be adjusted in the Setup / Temps menu.

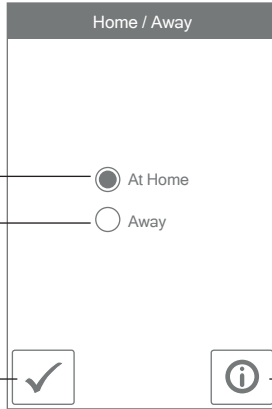

## Schedule

Current group of program days.


Go to the next group of program days.

Heating temperature

Early Start anticipates the time required to heat a room and starts early.

Set to On to follow the schedule. Set to Off to use the same temperature all of the time.


Creates a new schedule.

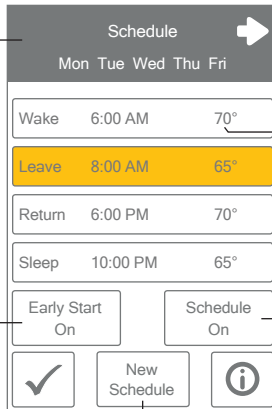

Set schedule start time

Set heating temperature

Select skip if you don't want a temperature change.

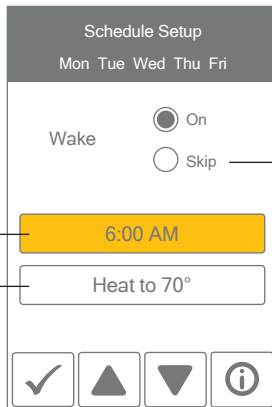

# Display

**DISPLAY 1/2**

Temperature Units: °F

Energy Use: Monthly

Brightness - Active: 80%

Brightness - Inactive: 50%

Theme: Light

Language: English

← ▲ ▼

Select °F or °C

Energy use. See below.

Brightness when touching the display

Brightness after 60 second timeout of no use

Choose the background color

Select English, French or Spanish

10 second count down to allow the screen to be cleaned with a moist cloth.

**DISPLAY OPTIONS 2/2**

Clean Screen: Off

Inactive Time Display: On

Inactive Outdoor Display: Off

← ▲ ▼

Select if the time is shown when inactive

Select if the outdoor temperature is shown when inactive

## Energy Use

**Daily Usage**

Today	0 hrs
Yesterday	0 hrs
Tue	0 hrs
Mon	0 hrs
Sun	0 hrs
Sat	0 hrs
Fri	0 hrs

✓ Monthly Usage ⓘ

View each day's run time for heating.

Toggle between Daily and Monthly Usage.

## Time

TIME & DATE

Aug 25 2016

1 30 PM

▲ ▲ ▲

▼ ▼ ▼

✓ OPTIONS ⓘ

When connected to the Internet, the time can be set automatically.

The time and date can be manually set by highlighting a field and then using the ▲ or ▼ buttons.

Time options are:

- 12 hour or 24 hour time format
- Automatic or manual time setting
- Time zone
- Daylight savings time

### **NOTICE**

Incorrectly setting the time and date manually may prevent the thermostat from communicating to the mobile app. Automatic time source is recommended when using an Internet connection.

## NOTICE

Before using the WiFi features of this product, you must accept the Terms of Use, as amended from time to time and available at [tekmarConnect.com/terms](http://tekmarConnect.com/terms). If you do not accept these terms, this product can still be used without WiFi features.

The thermostat includes a step by step tutorial to setup the WiFi connection.

**Tutorial**

Before first using wi-fi features of this product, you must accept the Terms of Use available at <http://tekmarConnect.com/terms> by pressing AGREE below.

If you do not accept these terms, this product can still be used without wi-fi features.

### Step 1

Agree to Terms of Use

**WIFI**

Off  
 On

### Step 2

Turn on WiFi

**NETWORK SSID**

Select a network from the list:

Your House ▼

### Step 3

Enter wireless network name. It must support WPA2 security encryption.

**Enter Password**

A	B	C	D	E	F
G	H	I	J	K	L
M	N	O	P	Q	R
S	T	U	V	W	X
Y	Z		Shft	A/1	Del

### Step 4

Enter WiFi password.

**ZIP/Postal**

1	2	3	4	5	6
7	8	9	0	-	/
:	;	(	)	\$	&
@	"	.	,	?	!
'	\		Shft	A/1	Del

### Step 5

Enter ZIP or postal code. This determines your location for weather information.

**Time Source**

Automatic  
 Manual


### Step 6

Select if the time is set automatically from the Internet or manually.

## tekmar Connect Web and Mobile App

To view and adjust the WiFi Thermostat using a mobile phone or tablet, download the tekmar Connect mobile app from the Apple® iTunes® Store or from the Google Play® Store. Alternatively, go to tekmarConnect.com for web browser access.


### Add Thermostat to App

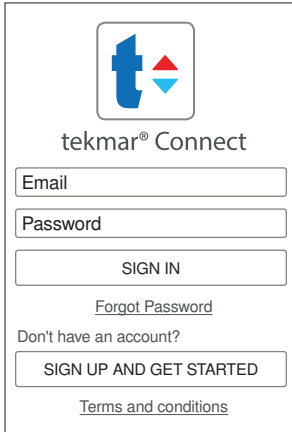

The screenshot shows the login page for the tekmar Connect app. At the top is the tekmar logo, a stylized 't' with a red triangle above it and a blue triangle below it. Below the logo is the text 'tekmar® Connect'. There are three input fields: 'Email', 'Password', and a 'SIGN IN' button. Below the button is a link for 'Forgot Password'. At the bottom, there is a link for 'Don't have an account?' and a 'SIGN UP AND GET STARTED' button, with a link for 'Terms and conditions' below it.

#### Step 1


Create a new account. Then login using your username and password.

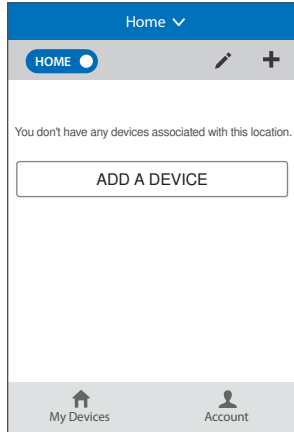

The screenshot shows the 'Home' screen of the app. At the top is a blue header with 'Home' and a dropdown arrow. Below is a grey bar with 'HOME', a pencil icon, and a plus icon. The main content area says 'You don't have any devices associated with this location.' and has an 'ADD A DEVICE' button. At the bottom is a grey bar with 'My Devices' and 'Account' icons.

#### Step 2

Add a Device

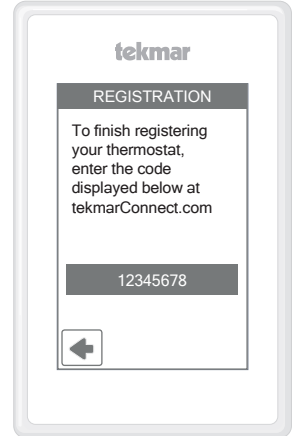

The screenshot shows the 'REGISTRATION' screen on a thermostat. At the top is the 'tekmar' logo. Below is a 'REGISTRATION' header. The main text says 'To finish registering your thermostat, enter the code displayed below at tekmarConnect.com'. Below that is a box containing the code '12345678'. At the bottom left is a back arrow icon.

#### Step 3


On the thermostat, go to WiFi menu and press Register Device.



The screenshot shows the 'Add a Device' screen. At the top is a blue header with a back arrow and 'Add a Device'. Below are four input fields: 'Activation Number' (with '12345678' entered), 'Device Name' (with 'WiFi Thermostat 561' entered), 'Location' (with 'Home' selected in a dropdown), and an 'ADD DEVICE' button. At the bottom is a grey bar with 'My Devices' and 'Account' icons.

#### Step 4


Enter the 8 digit number from the thermostat into the mobile app. Then enter the thermostat's room name. The app supports multiple site locations. Enter the location for the thermostat.

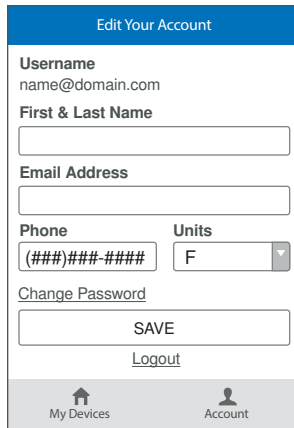

The screenshot shows the 'Edit Your Account' screen. At the top is a blue header with 'Edit Your Account'. Below are several input fields: 'Username' (with 'name@domain.com' entered), 'First & Last Name', 'Email Address', 'Phone' (with '(###)###-####' entered), and 'Units' (with 'F' selected in a dropdown). There is also a 'Change Password' section with a 'SAVE' button and a 'Logout' link. At the bottom is a grey bar with 'My Devices' and 'Account' icons.

#### Step 5

Edit your account and save.

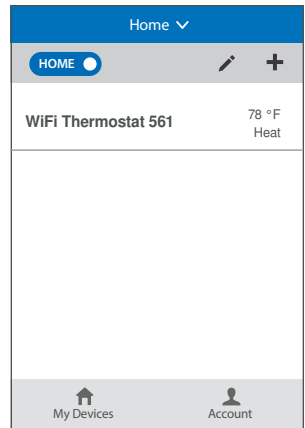

The screenshot shows the 'Home' screen of the app. At the top is a blue header with 'Home' and a dropdown arrow. Below is a grey bar with 'HOME', a pencil icon, and a plus icon. The main content area shows 'WiFi Thermostat 561' with a temperature of '78 °F' and 'Heat'. At the bottom is a grey bar with 'My Devices' and 'Account' icons.

The thermostat is now listed on the My Devices page.

# Using the App

Choose a location.

HOME  AWAY

Set to AWAY to save energy when you are away for a day or more.

View and change thermostat

Home

HOME  +

WIFI Thermostat 561 73 °F Off

WIFI Thermostat 561 75 °F Heat

WIFI Thermostat 561 78 °F Heat

My Devices Account

Add a device

Edit location info

Edit account info

Change from Heat or Off mode

Change heating setting

Save temperature change to the schedule

Return to home view

WiFi Thermostat 561

Auto

tekmar A WATTS Brand

HEAT TO 70°

TEMP 72°

40° 100°

SAVE TO PROGRAM CANCEL HOLD

My Devices Account

View and edit settings

View and edit schedule

Edit device info

Temperature change hold until schedule change